


## R3000/R4000 Bin Front Assembly

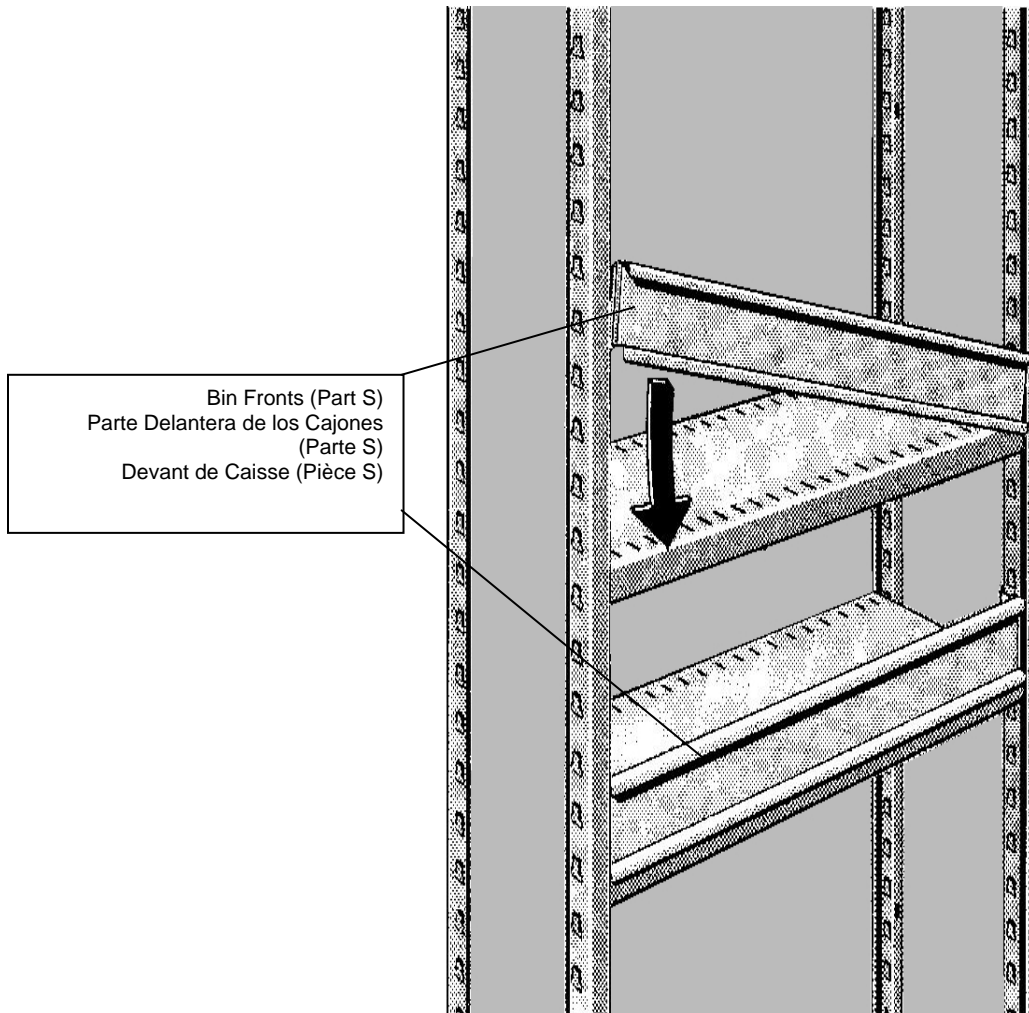

Insert bin front (Part S) diagonally between the uprights and lower it to a horizontal position onto the shelf. No nuts, bolts, or grommets required to hold in place.